

V16-12VGPS Manual Guide



To switch lakes, press ►, select then press OK to toggle between lakes 2, 3, 4, and 5. Each lake can store 8 waypoints with the bottom 8 numbers.

1.Select button
2.Cruise=Push joystick + ►

1.Press: set a waypoint
2.Hold: delete a waypoint



Set Home:

Press the button ► to select the home icon . Then, hold the **OK** button to store your home location (where your boat will return to).Please use this in the outdoor when you receive the GPS satellites only!.

Set Waypoint:

Press the button ► to select one of the . Then, press **OK** to save,the waypoint turns blue.

Cruise Control:

To engage cruise control, push the joystick forward and press the button ► simultaneously (you can adjust the speed by pulling or moving joystick in cruise control. To exit cruise control, push the joystick backward.

Go to The Saved Waypoint :

Press ► to select a saved waypoint (blue number). Then press the waypoint button , the boat will automatically navigate to the previously saved waypoint. In the settings, you can configure whether the boat will automatically release bait tray after reaching the waypoint by pressing the power button. and find “release” in the setting.

Return home : Press and hold the home button

Attention in use :

- 1.How to pair remote with boat when it doesn't connect? Hold ► button and press power button
- 2.Please flush the boat after use in salt water and make sure dries it.
- 3.Restore the bait knob manually by turning the knobs back
- 4.How to use Line release- Hang the fishing line on a stainless ring, use the ring to push the release switch into place, and then press the release button on the remote control ,or scan the code and watch our video tutorial

Setting: Press Power button to enter setting

Voltage: press ► to select Voltage,press **OK** and to modify

Alarm V: press ► to select alarm V,press **OK** and to modify

Release: press ► to select release,press **OK** to modify, M=manually, you can manually open bait tray when it reaches stored waypoint,

A=automatically, boat opens bait tray automatically at waypoint

Gyroscope: when boat does not go in straight line,change this

