



JABO BAIT BOAT
www.jaboboat.com

Smart Remote Control Fishing Bait Boat



Instruction Manual

Pair the remote with the hull:

Press and hold the OK button on the remote control and turn on the power button at the same time, then turn on the switch on the boat for about 1 second and the remote controller will make 3 beeps sounds, then release the OK button, the pairing is successful.

Normal remote control mode:

Use the joystick to control the motor speed. When turning the up and down button of the joystick is stopped at the middle point, the boat is in a stopped state at this time, move the joystick to the left or right, and the right or left motor will stop at this time.

Turn, the left or right motor rotates in proportion from 0% (the minimum speed that the motor can drive the boat) to 100% and is mainly used for spinning in place.

When the joystick is moved up or down, the speed of the left and right motors will rotate proportionally from 0% to 100%.

The right motor speed will be fine-tuned.

The right motor speed will be fine-tuned.

For example: when the joystick is in the center, push the joystick upwards to the 80% position. At this time, the left and right motors rotate at 80%. If you slowly move the joystick toward

Right deviation, the speed of the right motor is still 80%, and the speed of the left motor can be adjusted from 80% to 0%, which is mainly used to control the yaw problem.

Hardware Tie Rod Used to tie up lines/hooks



Maintenance

Controller

Please remove the battery if not in use for a long time.

Motor

Before using, please check whether the motor has entangled objects

Boat Body

1. Please wipe the moisture after use to keep the hull dry and clean
2. Please take out the battery and charge it when not in use for a long time
3. Do not store with corrosive liquids and objects
4. Do not bring the boat close to high temperature objects
5. When not using the boat, please put the boat in the matching bag to prevent dust.



Cruise control mode:

When the joystick remote control boat is moving forward or backward, press the cruise control button on the remote control, and after releasing the joystick, the boat will follow the current set speed

drive. When the boat is in stop mode, the cruise control key has no function.

When in cruise control mode, move the joystick to the left or right, and you can fine-tune the speed of the left and right motors. Example: Move the remote to the left

At this time, the speed of the right motor will increase by 1. Press and hold the joystick. When the speed of the right motor is increased to the maximum, there is no way to increase the speed. The motor speed will decrease by 1. In the cruise control mode, press the cruise control button once, and the cruise control mode will be released.

Voltage indication:

When the voltage of the remote control is lower than 2.3v, the LED on the remote control will flash slowly, indicating that the battery of the remote control is low voltage.



Battery Usage and Charging

- ◆ Host battery (standard)
- ◆ Battery charging interface (standard: 1 set battery)
- ◆ Battery charging (standard: 1 set battery)



For extra spare parts, please send mail to jabo@jaboboat.com